

## ELITE HD QUICK START GUIDE

---

**Menu Setting Navigation – To enter the menu you must be in LIVE mode. Please review the below commands in order to make any menu changes.**

*Change to Live Mode* = press and hold STOP then press REC

*Enter Menu* = press STOP

*Set/Select Menu Option* = press STOP

*Confirm* = press STOP

*Scroll* = press any arrow buttons

*Exit Menu* = press REC

1. **Install drive** – Slide the 2.5” Drive Enclosure into the slot located on the right side of the unit. Please note that it is normal for the drive enclosure to get warm; it quickly reaches a maximum temperature and will not exceed recommended temperature throughout use. ***Please note all new drives need to be formatted (see step 10) and then the unit needs to be power cycled.***
2. **Apply Power** - Plug the power adapter into a wall socket and connect it to the DC IN located on the bottom of the unit. If the unit is equipped with battery mounts attach battery to front of unit. Turn on unit POWER by holding recessed switch located on the bottom of the unit for one second.
3. **Connect inputs** – Connect HD/SDI embedded video source to IN.
4. **Select Video Format Menu** – The factory default setting is 1080i/59.94 or 50 depending on location. To change the video settings enter the menu and scroll to SET VIDEO FORMAT and press STOP. Scroll through the different video format options and set new format by pressing STOP then REC to exit menu. Exit menu. The new set video format will appear on the LCD during the live/recording modes and will be retained throughout power cycles.
5. **Record** – Press and hold REC button and press PLAY (▶) to start recording and press STOP button to stop recording, which will create a separate clip each time done. ***Please note the first clip will be named CLIP0000.***
6. **Lock Keypad Menu**– Enter the menu and scroll to LOCK KEYPAD. Select, confirm and exit the menu. **The next command will be locked.**
7. **Unlock Keypad Menu**- To unlock press and hold STOP then press REC – release and press STOP again.
8. **Play Clip Menu** – Connect HD/SDI embedded video OUT to compatible HD monitor or editing system. Enter the menu and scroll to LOAD CLIP. Scroll through the different clip names and select a clip. Exit menu and press PLAY.
9. **Unload Clip Menu** – Enter the menu and scroll to UNLOAD CLIP. To unload the clip press STOP and exit the menu.
10. **Delete All Clips Menu** – Enter the menu and scroll to DELETE ALL CLIPS. Select the menu by pressing STOP and confirm by pressing STOP again. Exit menu. ***PLEASE NOTE: This menu must be used to format a new drive before you can record.***
11. **Delete Clip Menu** - Enter the menu and scroll to DELETE CLIP. Scroll through the different clip names and select a clip. Confirm and exit the menu.
12. **Turn Off Elite HD** - Turn off unit POWER by holding recessed switch located on the bottom of the unit for five seconds.